

Novoferm Transmitter Programming Instructions

How to program an additional transmitter to a Novoferm operator

Novomatic and Novoport

Press the oval program button on the operator once, number one will appear on the display, press the desired button on the transmitter and the dot next to the number one will flash for about three seconds, the transmitter is now coded to operate the operator. Press the program button once more and number two will appear on the display, this allows you to program the transmitter to the courtesy light on the operator, press the other button on the transmitter and the dot next to the number two will flash for about three seconds, the transmitter is now coded to operate the light on the operator. Note: you can only switch the light on with this function, it will turn off by itself after the time delay that has been set on the operator.

Press the program button once more and the display will go to zero, now try the transmitters.

Vivoport

Press the blue button underneath the operator for four seconds until you hear a bleep and then let go, the operator will start to click and the light will flash, press the button on the transmitter once and the clicking and flashing will stop, now try the transmitter, job done.

How to clear the memory and delete all transmitters from a Novoferm operator

(necessary if a key-fob has been lost or stolen)

Novomatic and Novoport

Switch the power off at the operator and whilst switching the power back on make sure that you have your finger pressed on the oval program button at the same time, this will delete the transmitter from the operator when you release the button number one will appear on the read out on the operator, you then press the program button twice so the read out goes back to zero, job done.

Vivoport

Press the blue button underneath the operator for eight seconds, after four seconds you will hear a bleep and after eight seconds when you release the button the light will flash rapidly for about three seconds, job done.

Universal receivers

Press the button inside the receiver until it stops flashing, all transmitters are now deleted.

Novoferm technical support: 0161 486 0066

Amourelle Products Limited - The UK's #1 Garage Door Spares & Automation Specialist

(c) Copyright 2008 Amourelle Products Ltd United Kingdom

www.Garage-Door-Remotes.co.uk