


Programming The New 4 Channel Handset To a Bosch Motor.


By using the illustrations as a guide, identify the type of motor fitted to your garage door. Follow the simple steps depending on your motor type. The programming of a new remote will not effect any existing remotes, each motor can store up to 10 seperate handsets.

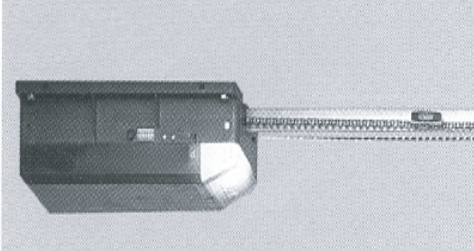

Bosch Profi-Lift Motor.

Programming Bosch Handsets To a Bosch Profi-Lift Motor.

1. Open the battery compartment on the bottom of the new 4 button handset. Adjust the upper bank of dip-switches (Closest to the 4 blue buttons.) to a random code. This needs to be adjusted for security reasons.
2. On the side of the motor body (The side that is shown in the picture.) there is a recessed button next to a small red light marked CODE. Press and hold down this button (Use a pin or a biro.) until the red light illuminates, then release the button.
3. Press and hold the top left blue button on the new handset, until the red light on the motor stops flashing and goes out.
4. Wait 10 seconds and then briefly press the top left blue button again. This should now operate the garage door.

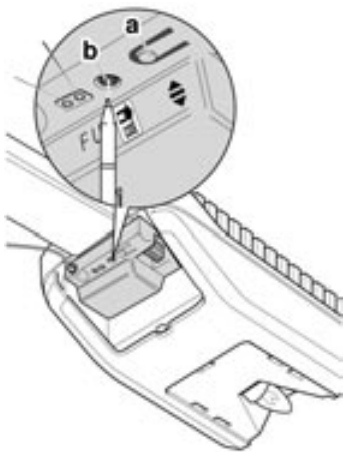

Bosch S Series Motor.

Programming Bosch Handsets To A Bosch S Series Motor.

1. Open the battery compartment on the bottom of the new 4 button handset. Adjust the upper bank of dip-switches (Closest to the 4 blue buttons.) to a random code. This needs to be adjusted for security reasons.
2. Under the front flap on the motor (As shown in the picture.) there is a black control box. Using something long and thin (ie. a pin or cocktail stick.) briefly press the button marked CODE (Shown as b in the picture.) The main light will start to flash on and off.
3. Press and hold the top left blue button on the new handset, until the light on the motor stops flashing and goes out.
4. Release the button on the handset and the main light will begin to flash again. Press and hold the top left button on the handset again and the light will stop flashing and go out.
4. Wait 10 seconds and then press the top left blue button. This should now operate the garage door.